

 Press ● **START** to begin cycle. Lid will lock.  
 Presione ● **START** para empezar ciclo. La puerta se bloqueará.

 Press ● **START** and hold 3 seconds to pause cycle. Lid will unlock.  
 Presione el boton ● **START** por 3 segundos para detener el ciclo. La puerta sera des bloqueada.

XY140129

**Whirlpool Commercial Laundry** has created a decal to educate your customers on how to **START** and **PAUSE** high-efficiency top-load washers with the LID LOCK feature.

**Decal Placement**—For proper placement of the **START/LID LOCK** decal, refer to the pictures of the different Whirlpool® washer consoles below.



**To Order the Decal:**  
 Visit Whirlpool Web World [www.whr.com](http://www.whr.com)  
 or call **1-800-643-3444**

XY140128 (French/English) 2-1/2" x 2"—not shown  
 XY140129 (English/Spanish) 2-1/2" x 2"

